


# REMOTE CONTROL USER GUIDE

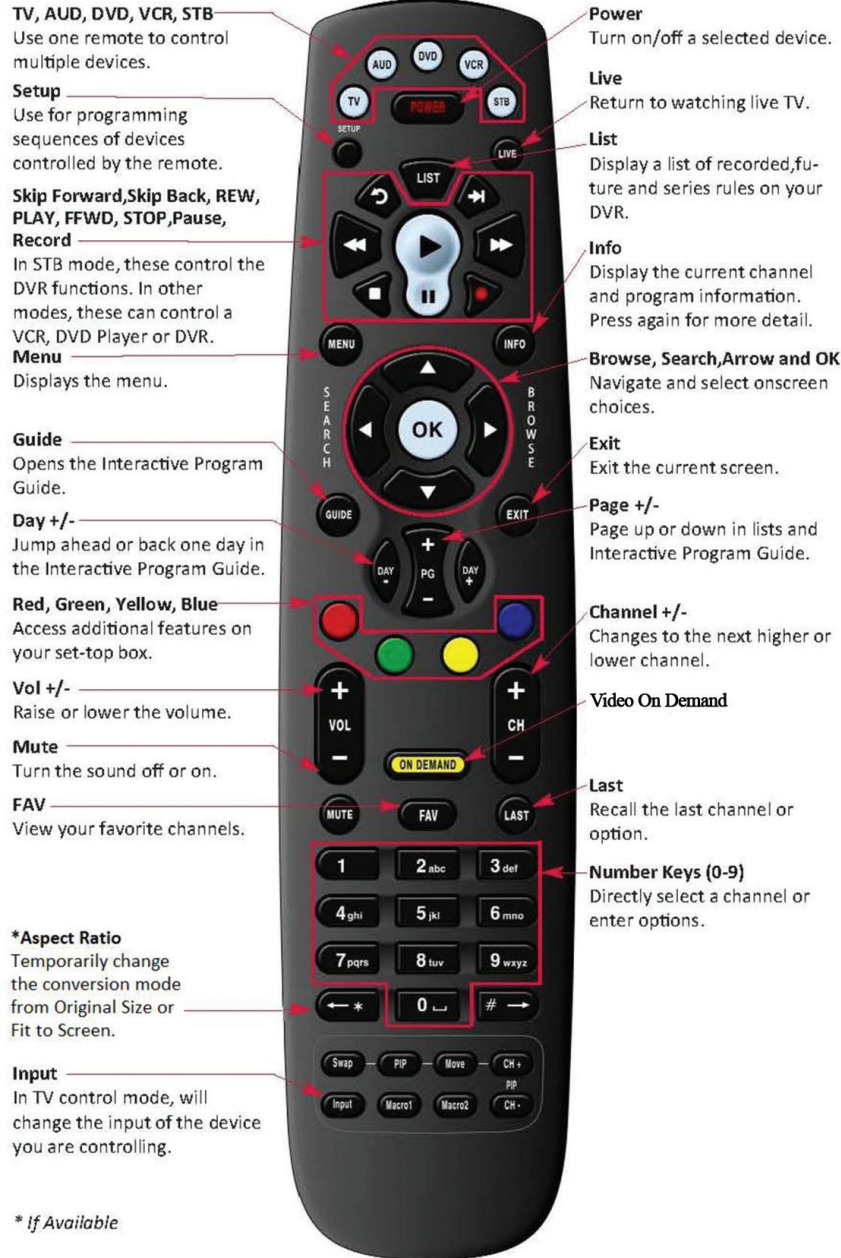

# REMOTE CONTROL

## Programming Instructions

---

### DVR REMOTE PROGRAMMING INSTRUCTIONS *WITHOUT THE TV BRAND CODES*

1. Turn the TV on
2. Point the remote control towards the TV
3. Press the TV button on the remote control once
4. Hold the setup button on the remote until the TV button on the remote control flashes twice.
5. Press 991, when you do this the TV button light will flash again
6. Press the channel up button until TV turns off
7. When TV turns off, hold the setup button on the remote until the TV button light on the remote flashes twice.
8. Programming is now complete

### DVR REMOTE PROGRAMMING INSTRUCTIONS *WITH THE TV BRAND CODE LIST*

1. Turn the TV on
2. Point the remote control towards the TV
3. Press the TV button on the remote once
4. Hold the setup button on the remote until the TV button on the remote control flashes twice
5. Press 991, when you do this the TV button light will flash again
6. Enter TV brand code from sheet that has been provided.  
Once the code is entered, the TV should automatically turn off.
7. If TV does not automatically turn off as indicated in step 6,  
enter the next code on the provided list until TV automatically turns off.
8. When TV shuts off, hold the setup button on the remote until the TV button light on the remote flashes twice.
9. Programming is now complete

### BIG BUTTON REMOTE PROGRAMMING INSTRUCTIONS *WITHOUT THE TV BRAND CODES*

1. Turn the TV on
2. Point the remote control towards the TV
3. Press the OK button on the remote and the TV button on the remote at the same time until the TV button stays lit up
4. Press channel up until the TV turns off
5. When TV turns off, press TV button on the remote one time
6. Programming is now complete

### BIG BUTTON REMOTE PROGRAMMING INSTRUCTIONS *WITH THE TV BRAND CODE LIST*

1. Turn the TV on
2. Point the remote control towards the TV
3. Press the OK button on the remote and the TV button on the remote at the same time until the TV button stays lit up
4. Enter TV brand code from the sheet that has been provided.  
When code is entered, the TV should then automatically turn off.
5. If TV does not automatically turn off as indicated in step 4,  
enter the next code on the provided list until TV automatically turns off.
6. When TV shuts off, press the TV button on the remote one time.
7. Programming is now complete